

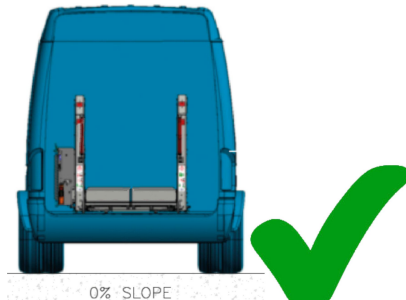
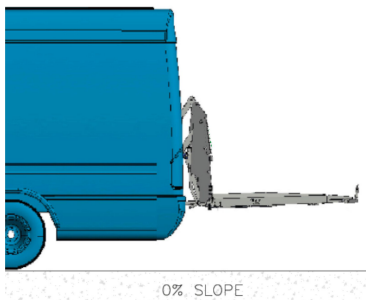



## Intended Use

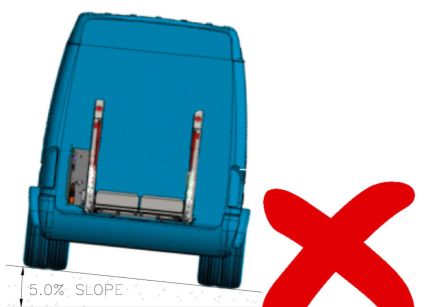


## Improper Use

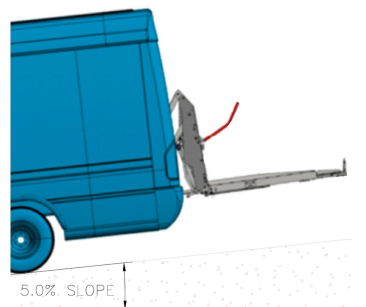


## Loading Option A

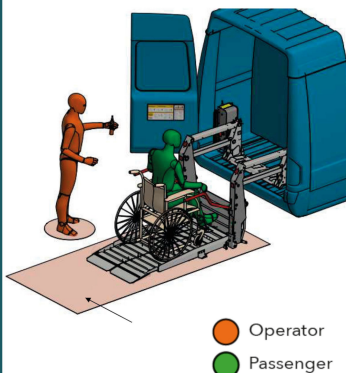

## Loading Option B

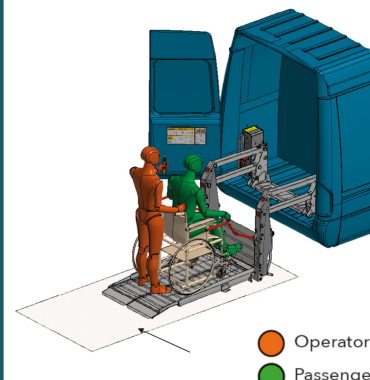

## Loading Option C

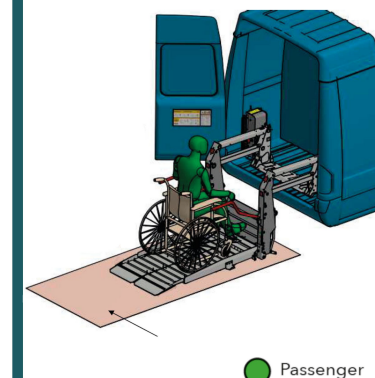


\* Wireless remote control option recommended


## Isolator

Lift Switch

Cab Switch

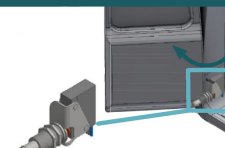

## Safety Devices

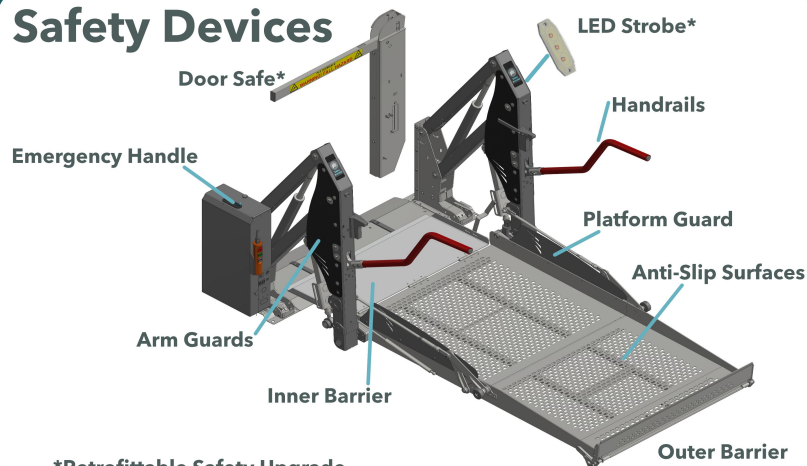


\*Retrofittable Safety Upgrade

- The lift must be operated by fully trained and competent operators only.
- Suitable lighting **MUST** be provided to enable the operator to use the lift.
- The emission sound when the lift is in operation should not exceed 80dB.
- It is the operators responsibility to ensure that all safety features fitted are used appropriately and that all safety warning devices, safety labels / information is/are present and correctly displayed at all times.
- The platform lift is a mechanical device controlled by an advanced hydraulic/electrical system that enables passengers to be elevated safely from the ground into the vehicle.


## Standard Operating Procedure

Lift down to ground level

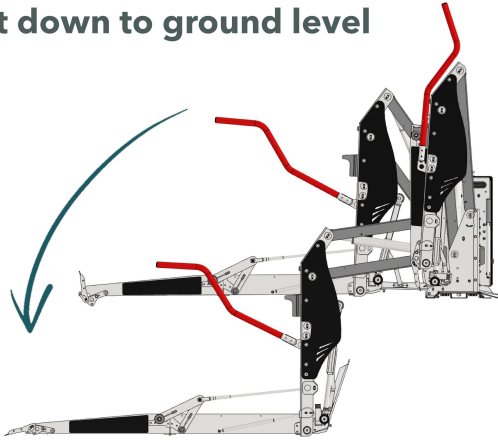


DOWN

Lift up to floor level

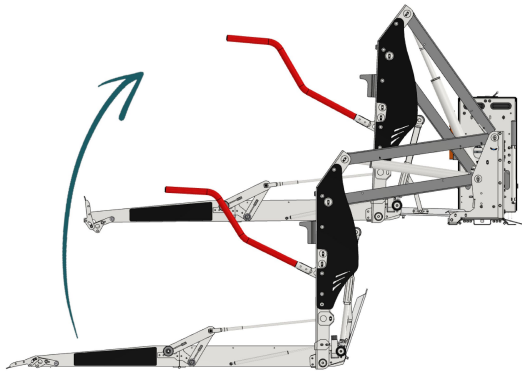

UP

Lift up to stow position

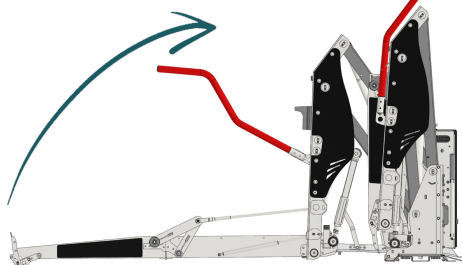

STOW

## Manual Override Procedure

