


Easy Access Lift Operating Procedure

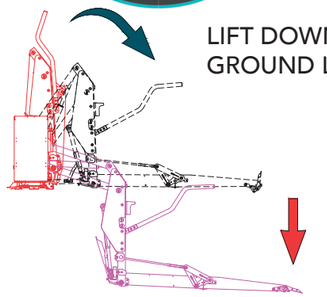

LIFT DOWN TO GROUND LEVEL


DOWN



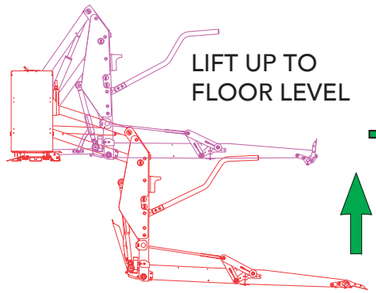


LIFT UP TO FLOOR LEVEL

UP




LIFT STOPS AUTOMATICALLY AT VEHICLE

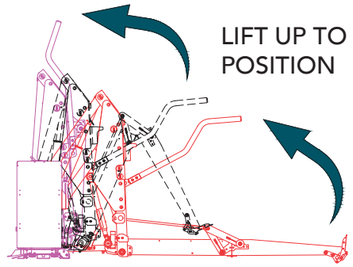


LIFT UP TO STOW POSITION


STOW




Manual Override Procedure

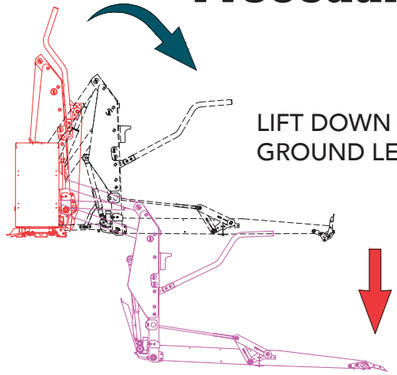

LIFT DOWN TO GROUND LEVEL

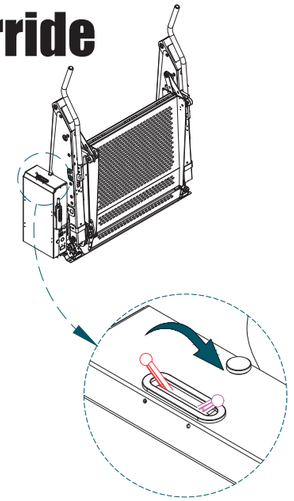


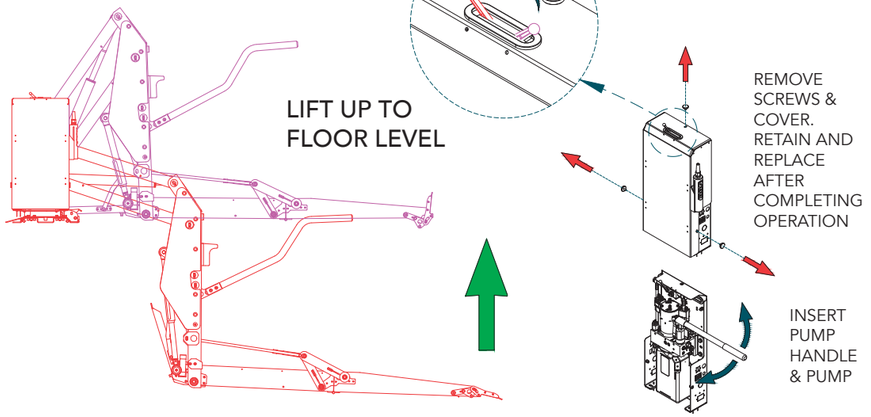

LIFT UP TO FLOOR LEVEL

REMOVE SCREWS & COVER. RETAIN AND REPLACE AFTER COMPLETING OPERATION

INSERT PUMP HANDLE & PUMP

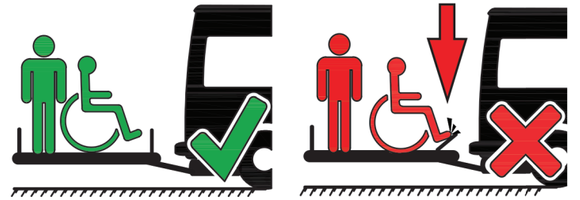

ATTN: OPERATOR ALWAYS AT THE REAR!

SAFETY INSTRUCTIONS

IMPORTANT- *FAMILIARISE YOURSELF WITH CONTROLS AND SAFETY PROCEDURES* ***BEFORE*** *USING LIFT.*

TAIL LIFT SAFETY

Only an authorised operator must control the lift.

Secure the vehicle doors in the open position well clear of the platform.

Keep within the maximum safe working load.

Keep people away from the operating area (inside and outside the vehicle).

Ensure that the platform is level.

Switch off the isolator (if fitted) before leaving the lift unattended.

VEHICLE SAFETY

Do not operate the lift on a steep hill, camber or uneven ground.

Ensure that the vehicle handbrake is firmly applied.

Ensure that the platform is properly stowed after loading.

Do not move the vehicle with the platform lowered near the ground.

Do not move the vehicle with a person / load on the platform.

PEDESTRIAN PASSENGERS ENSURE THAT:-

- Passengers keep clear of the platform edges.
- They hold onto the hand rails.
- They do not climb onto the platform.
- They do not leave the platform before it reaches the floor or ground.

WHEELCHAIR PASSENGERS ENSURE THAT:-

- Operator is behind wheelchair.
- They are stable.
- They do not overhang the platform.
- They do not contact the bridge plate.
- Their handbrakes are applied.
- Electric wheelchairs - engage neutral.

INSIDE THE VEHICLE ENSURE THAT:-

- Wheelchairs are clamped to the floor.
- Seatbelts are used.

Main Office 0121 552 0660